


Aspen Home Electronics

Visit my Website at:

<http://www.kevinsconnections.com/>

Cell: (970)618-7437, Hm/Fax: (970) 963-1036, E-Mail: kevinsconnections@comcast.net, 329 Rabbit Rd., Carbondale, Co. 81623

Xfinity Remote Control Instruction Sheet

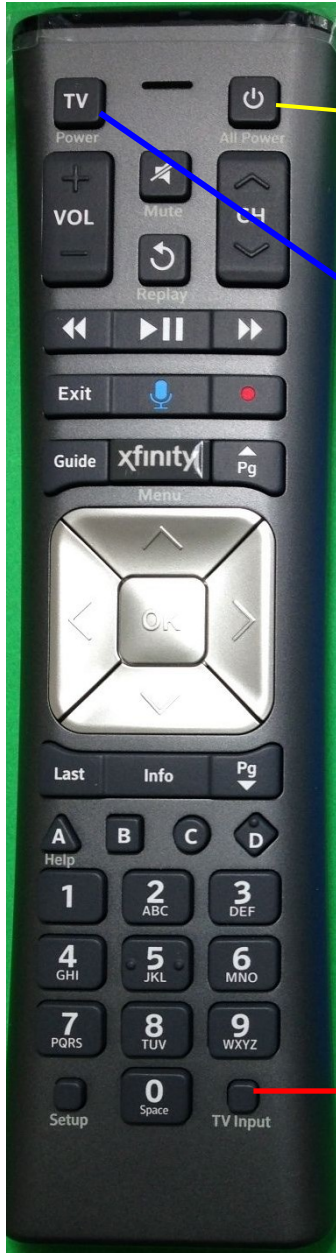

Turning your TV On & OFF:

There are two ways to turn your equipment on and off:

1. Press the "ALL POWER" button.

In a perfect world this turns on the TV and the cable box. However, in many cases only one device will actually turn on. If you press it again the cable box might turn on and the TV turns off. This is why I do not recommend this method.

2. **Preferred Method:** Leave the cable box on all of the time and turn the TV On and Off using the "TV POWER" button.

Other Buttons:

Play/Pause: Play or pause live TV, XFINITY On Demand or DVR content.

FF: Fast forward XFINITY On Demand or DVR content.

Rew: Rewind XFINITY On Demand or DVR content.

Exit: Exit on-screen guides; stop and exit XFINITY On Demand and DVR content. When replaying moments from a live TV program, press **Exit** to return to the "Live" point.

Microphone: Activates voice control.

Record (red dot): Records the current program.

Replay: With DVR service, replay jumps back 15 seconds within a program.

Xfinity: Displays the main menu of the guide, providing access to all guide features, including DVR and XFINITY On Demand.

A: Press the **A** button to view the **Help** menu.

B: Use the **B** button to display scaled video in the bottom right-hand corner when the full guide is displayed.

C: Press the **C** button to launch the Sports app and see scores, even while watching TV.

D: Use the **D** button to delete a single DVR recording or multiple recordings within a folder.

Playing connected devices like an AppleTV or DVD Player:

Use the "TV INPUT" button to toggle through the TV's inputs. Press the "INPUT" button and a list of your TV's inputs should appear on the TV. Pressing the "INPUT" button multiple times should toggle through the inputs.

Stop pressing the "INPUT" button once the proper input is highlighted. Your TV should change to this input in a few seconds.

Use the remote control associated with your AppleTV or DVD Player to control it.

AppleTV Input: _____

DVD Input: _____

Turning things OFF: Press the "TV POWER" button to turn the TV off. Leave the cable box on. An AppleTV should automatically go into the standby mode in about an hour. For a DVD Player, press the power button on its remote control.